
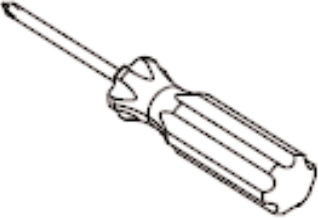

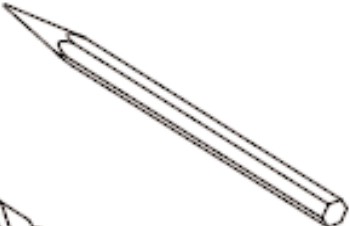

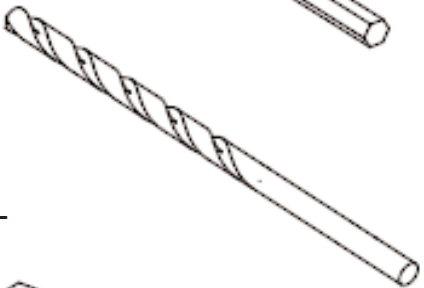
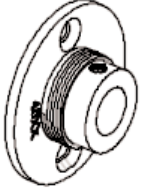
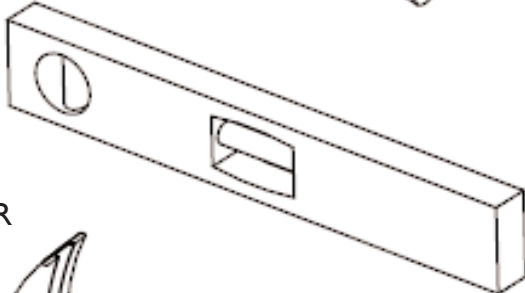

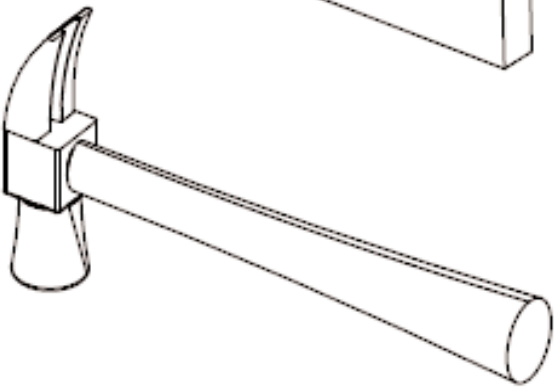




ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR	 X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR	 X 2	PEN / PENCIL	
#8 SCREW	 X 2	1/4"(6 mm) DRILL	
MOUNTING FLANGE	 X 1	LEVEL SET	
M5X5 SET SCREW	 X 1	HAMMER	
2.5 MM HEX KEY	 X 1		
TOWEL RING	 X 1		

INSTALLATION INSTRUCTIONS

TOWEL RING




2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207


WWW.GINGERCO.COM

WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING FLANGE
STEP 1b

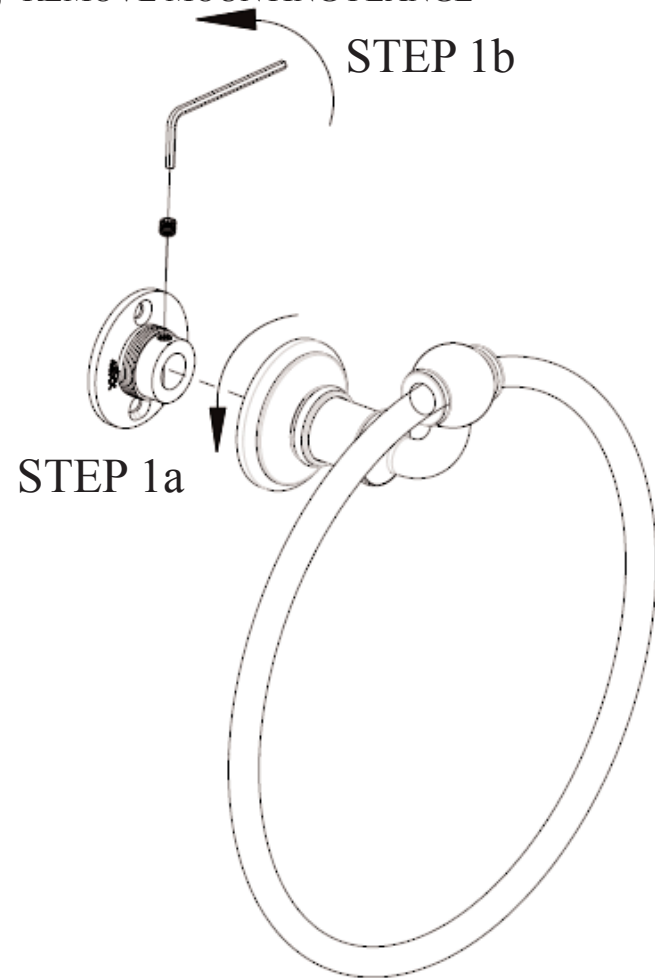

② ALIGN MOUNTING FLANGE AND MARK LOCATION

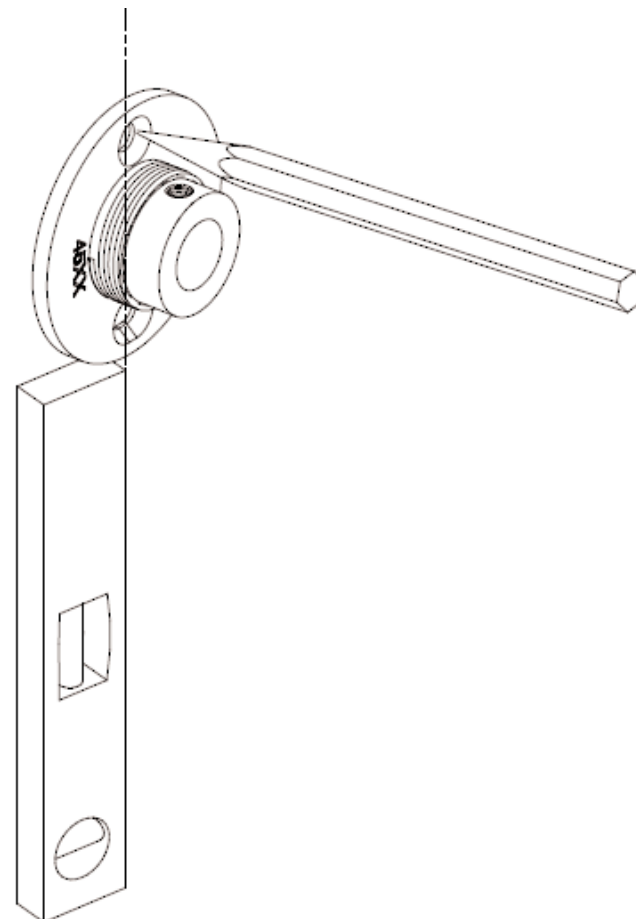



③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

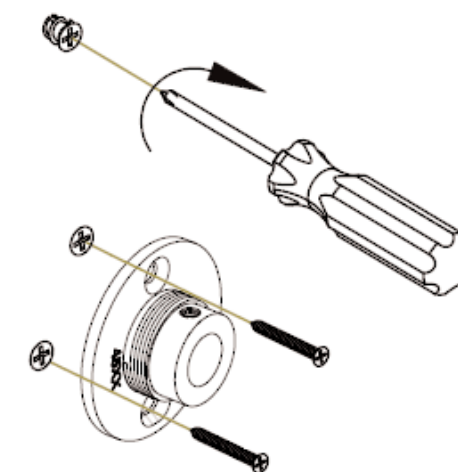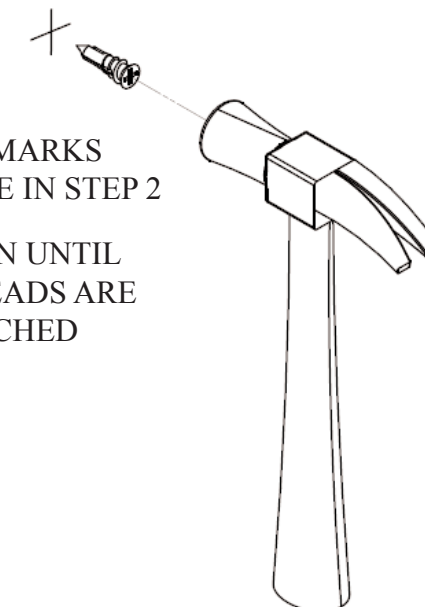

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

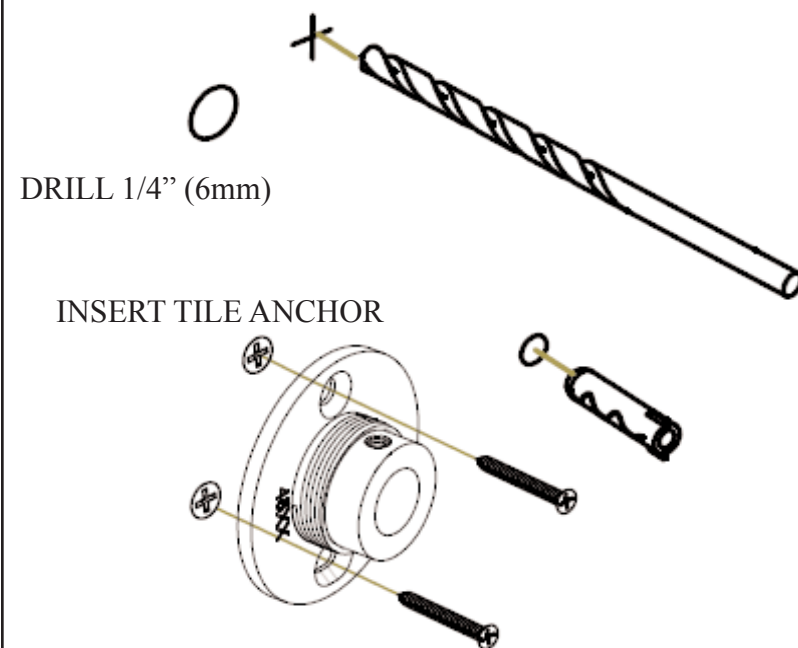

⑤ INSTALL PRODUCT ONTO FLANGE

SECURE WITH SET SCREW

