

NOTES:



1. TO INSPECT ASSEMBLY, FOLLOW FIRST ARTICLE AND IN PROCESS INSPECTION SHEET.

2 APPLY PALMER MIRROR MASTIC

3 LOCATION OF VHB TAPE

**BILL OF MATERIAL (CURRENT LEVEL)**

ITEM	PT/ASSY	DESCRIPTION	TYPE	QTY.
1	C2641	15" x 30" MIRROR GLASS	PART	1
2	91477	ADHESIVE BACKED BUMPER	PART	2
3	2641-FPA	FINGER PULL	ASSEMBLY	1
4	2641B	LONDON TER MIRROR BRACKETS	ASSEMBLY	1
5	2641SC	SUPPORT CHANNEL	PART	1
6	91462	VHB TAPE 1" X 1 1/2" LONG	PART	2

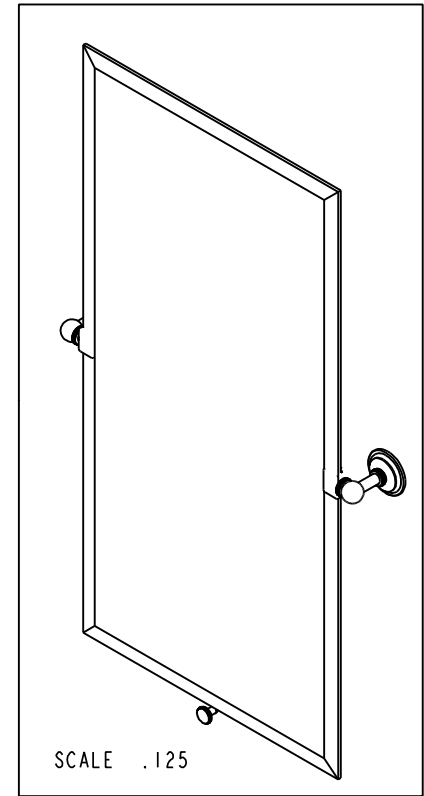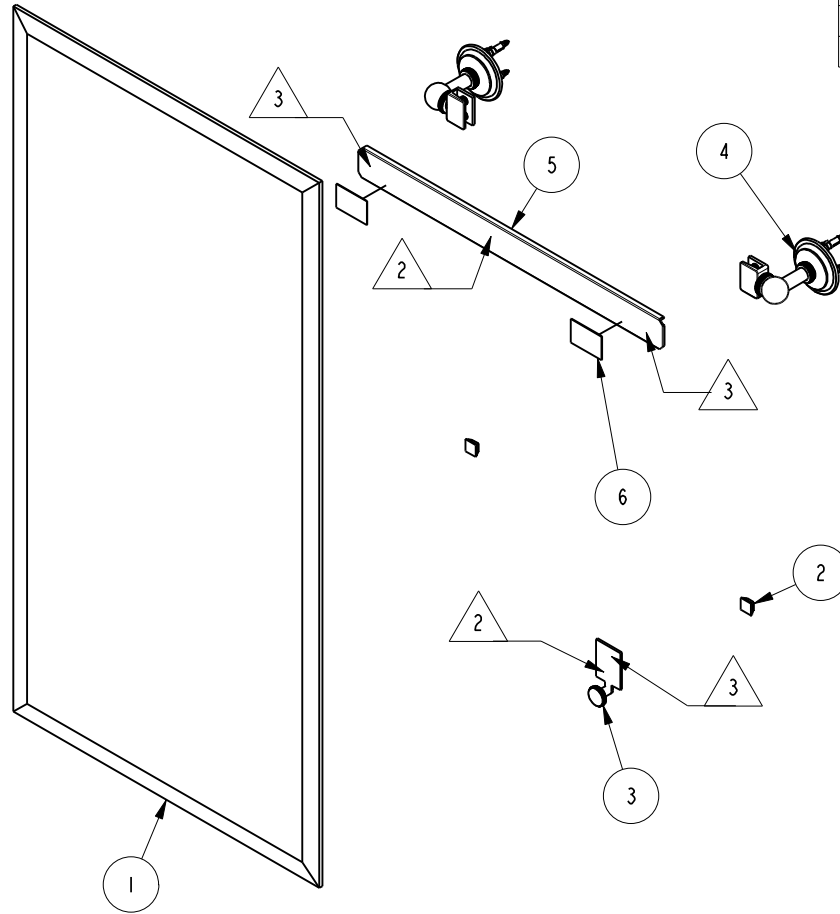

ZONE	REV	DESCRIPTION	DATE	APPROVED
-	C	EN-4300p	06/16/21	R.S.
-	B	EN-2148	04/30/12	-
-	A	EN-1477	02/19/10	-

COPYRIGHT 2005 BRASSTECH, INC. THESE DRAWINGS AND THE DESIGNS DEPICTED HEREIN ARE THE PROPRIETARY PROPERTY OF BRASSTECH. ANY USE OR REPRODUCTION IS SUBJECT TO THE EXPRESS APPROVAL OF BRASSTECH. UNAUTHORIZED USE IS STRICTLY PROHIBITED. ALL RIGHTS RESERVED.


TESTING	ASSEMBLY	PLATING	POLISHING	MACHINING
-	-	-	-	-
-	-	-	-	-
-	-	-	NEXT ASSY	USED ON
-	-	-	-	-
APPLICATION				
TOOLING FIXTURE #	REMOVE ALL BURRS AND SHARP EDGES			

UNITS ARE: INCHES [MM]	
TOLERANCES ARE:	
FRACTIONS	DECIMALS
ANGLES	±°
±1/16"	.X ±.1 [2,5]
	.XX ±.06 [1,5]
(X.XXX) DENOTES CRITICAL DIMS.	
ALL THREADS ARE CRITICAL	
DRAWN	JINSON
CHECKED	R.S.
APPROVED	R.S.

**BRASSTECH** 2001 CARNEGIE AVE. SANTA ANA, CA 92705 (949) 417-5207  
INCORPORATED

**SMALL MIRROR GLASS ASSEMBLY**

DWG NO. 2641	REV C
SCALE .150	REF. -
SHEET 1	OF 2

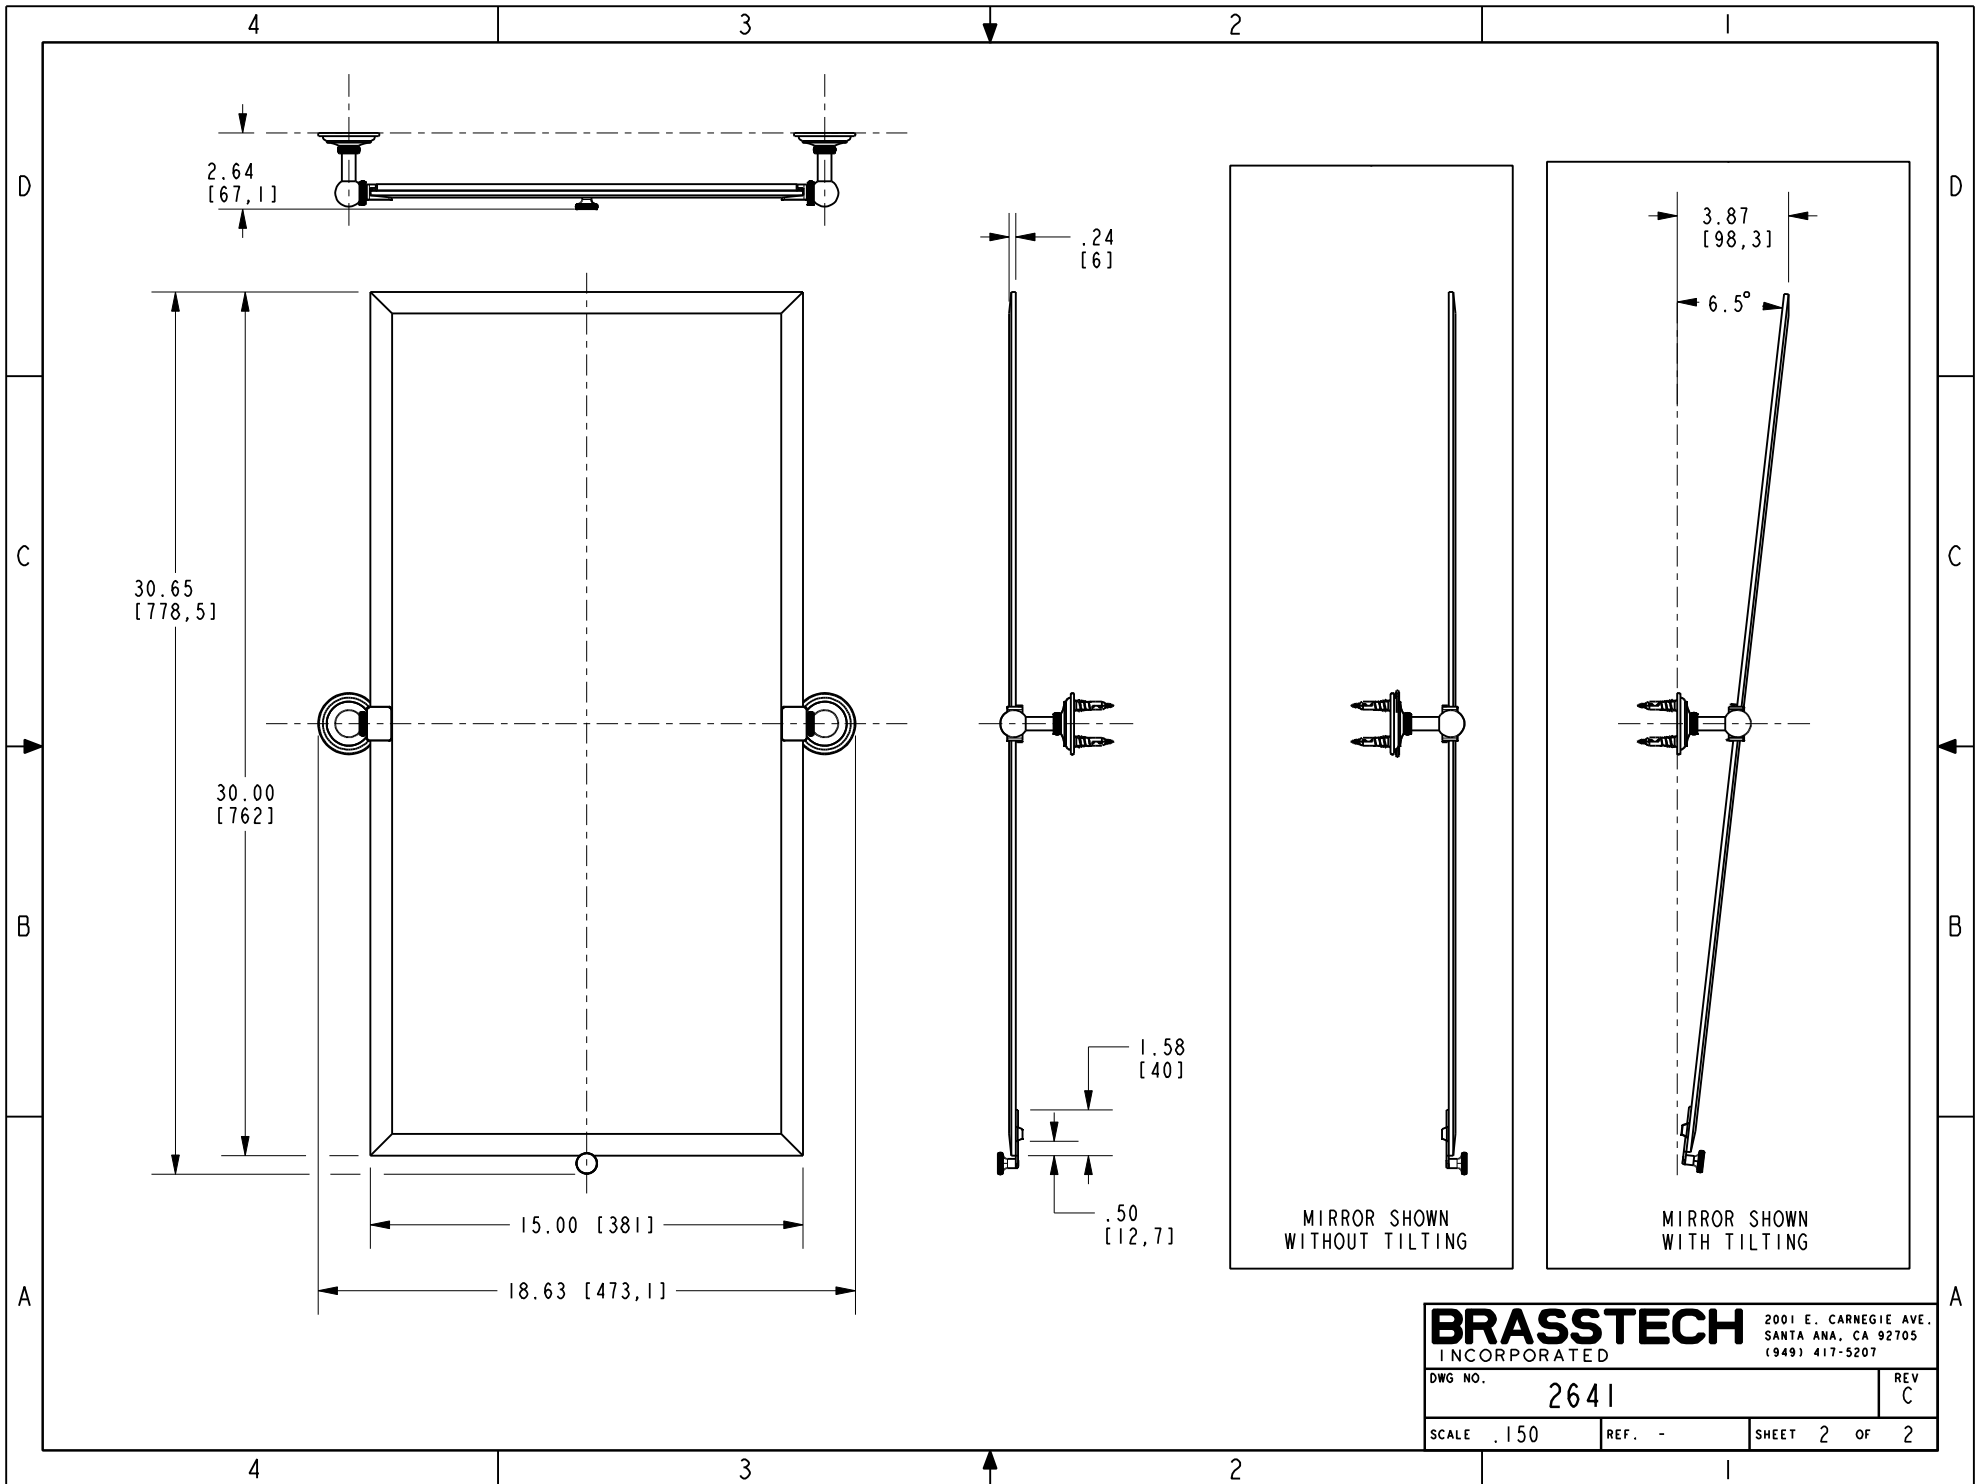

<b>BRASSTECH</b>		2001 E. CARNEGIE AVE. SANTA ANA, CA 92705 (949) 417-5207	
DWG NO.	2641	REV	C
SCALE	.150	REF.	-
		SHEET	2 OF 2