
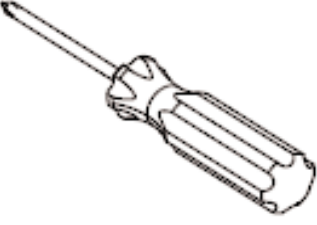

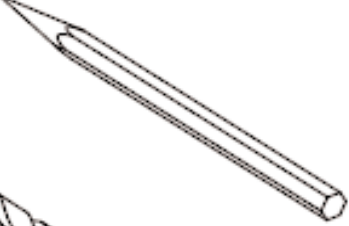

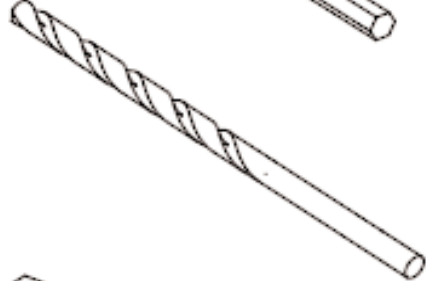

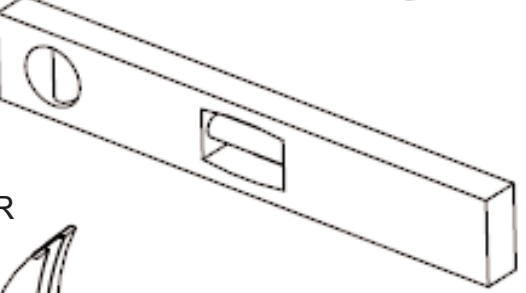

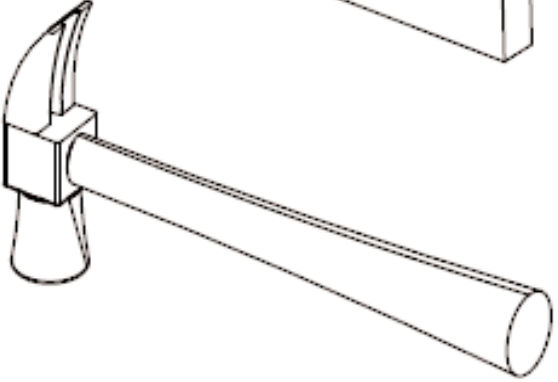
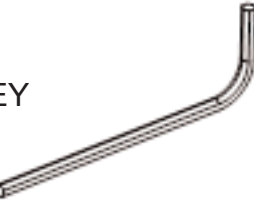
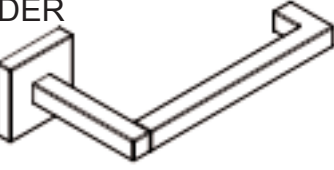


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
1/4-28x3/16" SET SCREW		X 1	HAMMER	
1/8" HEX KEY		X 1		
SINGLE POST TT HOLDER		X 1		

# LINEAL

## INSTALLATION INSTRUCTIONS


5206

## SINGLE POST TOILET TISSUE HOLDER


GINGER<sup>®</sup>  
*Luxury For Your Lifestyle<sup>™</sup>*

2001 CARNEGIE AVE, SANTA ANA CA 92705  
 (949) 417-5207  
 WWW.GINGERCO.COM

① REMOVE MOUNTING BRACKET

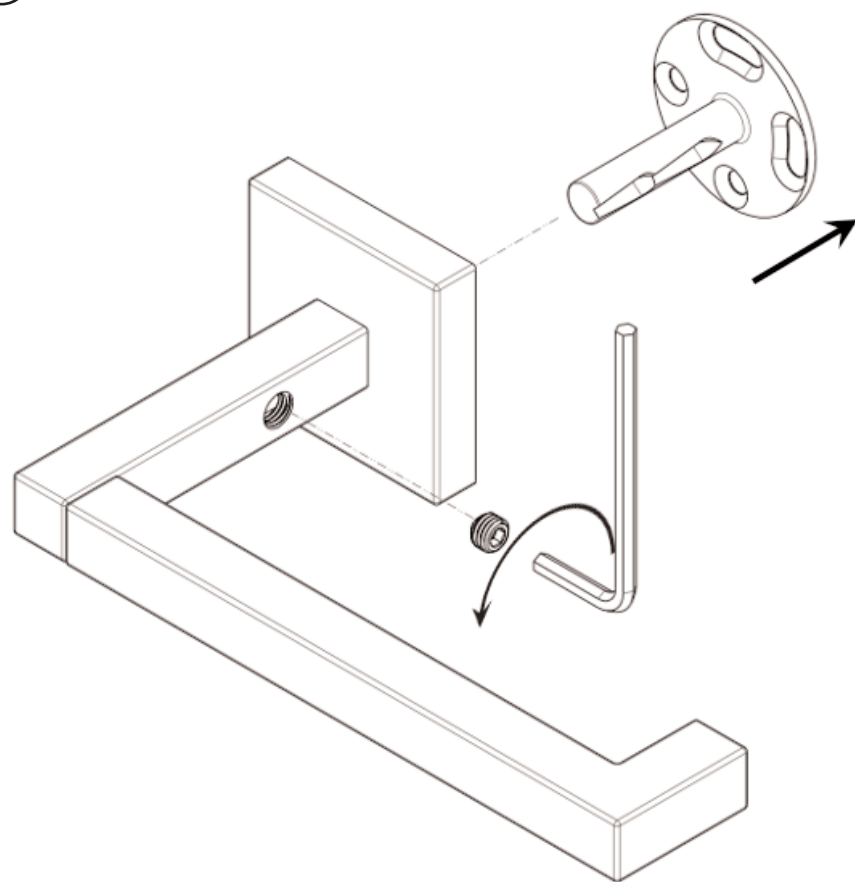


② ALIGN MOUNTING BRACKET AND MARK LOCATION

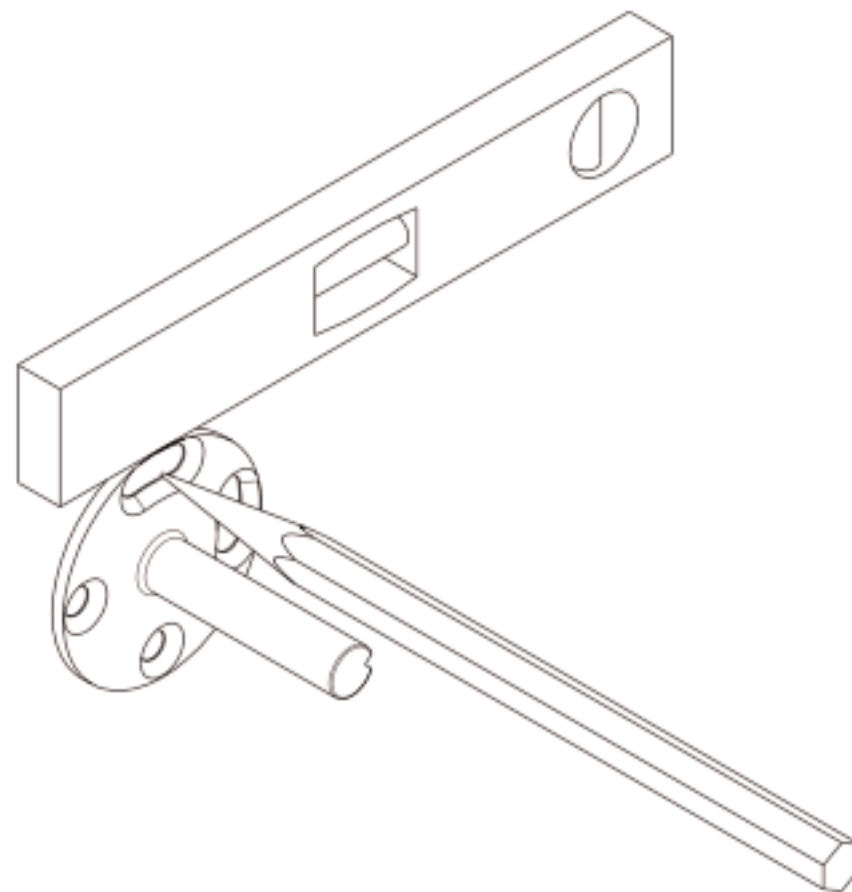

③ DRY WALL INSTALLATION

DO NOT DRILL

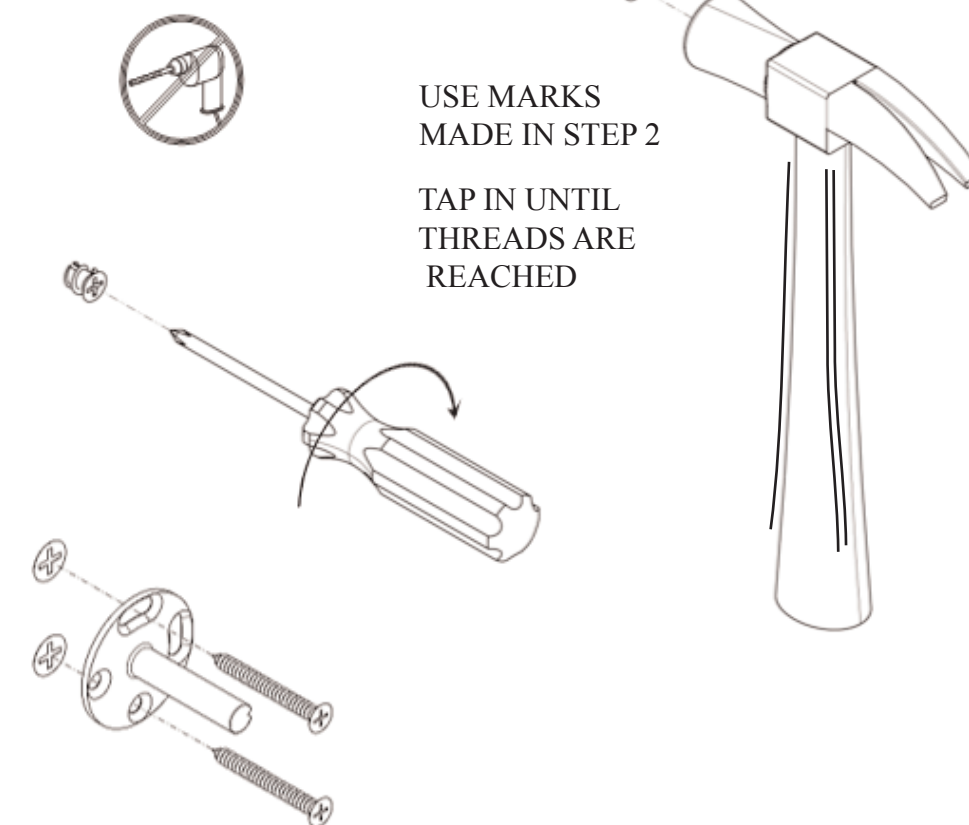


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

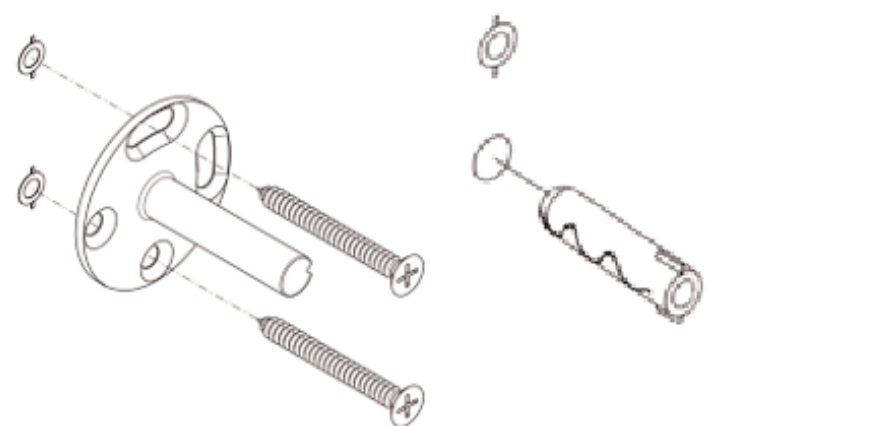

⑤ INSTALL PRODUCT ONTO BRACKET

ESCUTCHEON

SECURE WITH SET SCREW

