
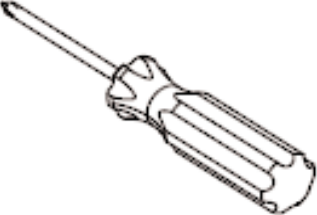

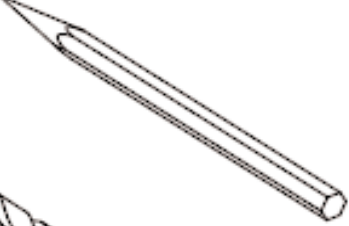

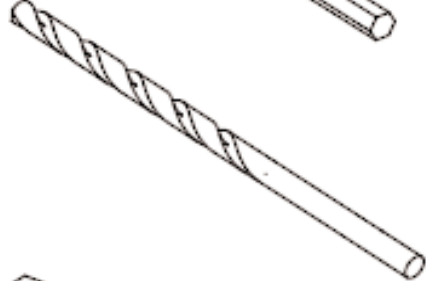
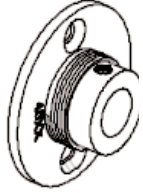
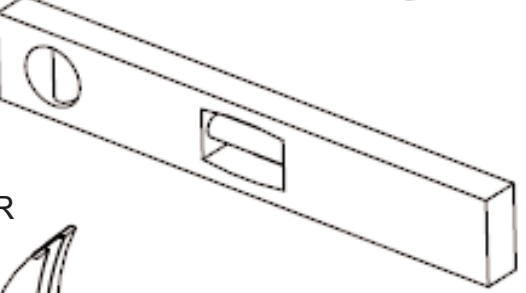

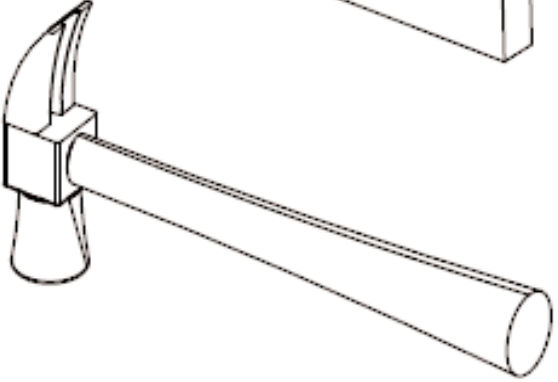





ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING FLANGE		X 1	LEVEL SET	
M5X5 SET SCREW		X 1	HAMMER	
2.5 MM HEX KEY		X 1		
HANGING TOILET TISSUE HOLDER		X 1		

INSTALLATION INSTRUCTIONS HANGING TOILET TISSUE HOLDER




2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING FLANGE

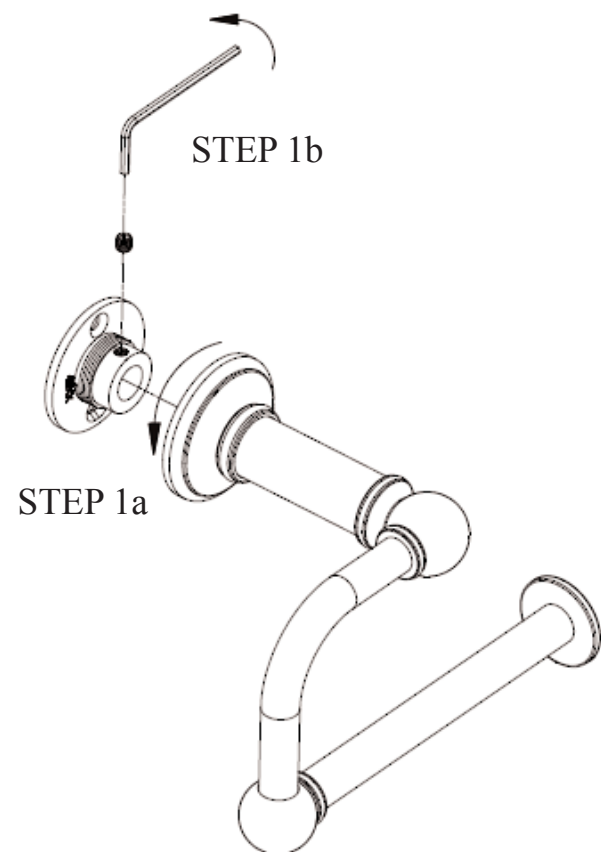


② ALIGN MOUNTING FLANGE AND MARK LOCATION

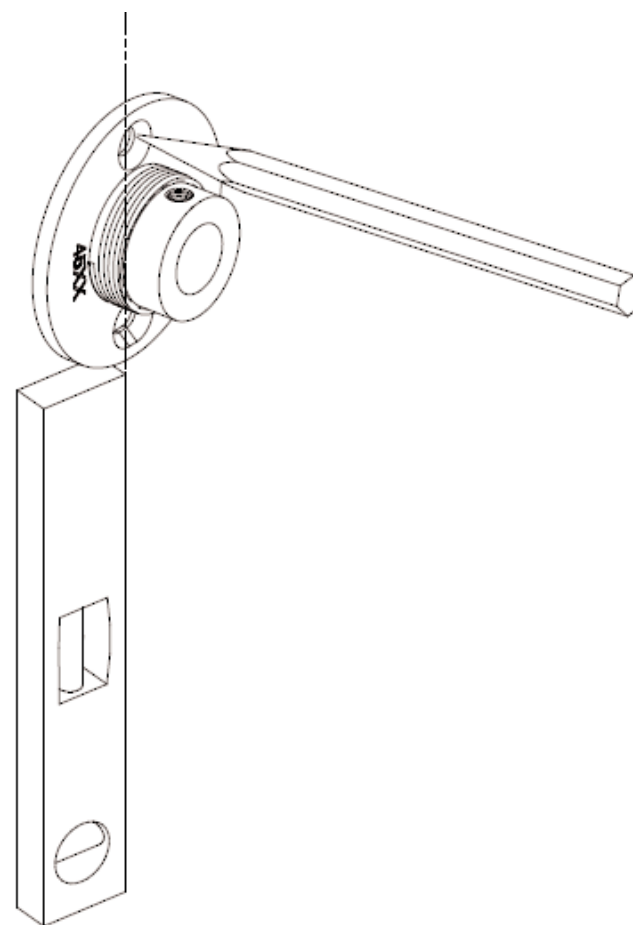


③ DRY WALL INSTALLATION

DO NOT DRILL

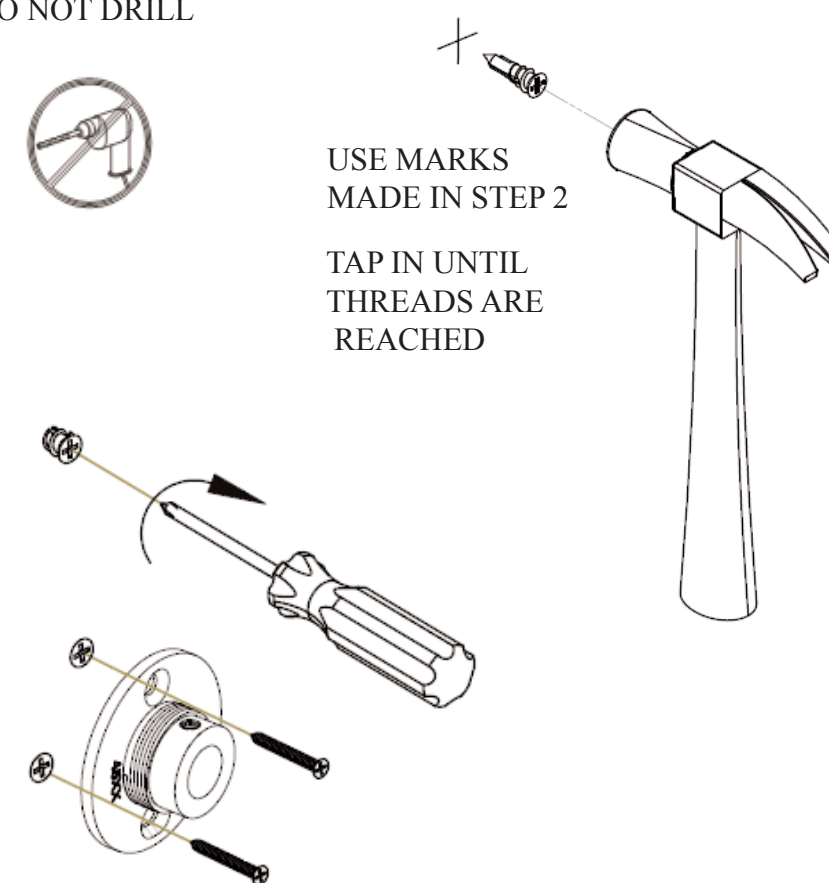

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

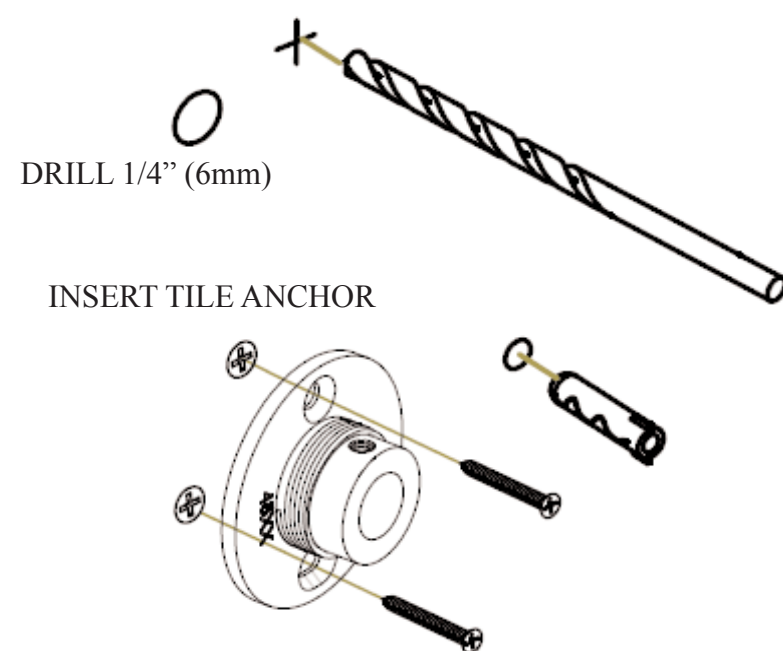

⑤ INSTALL PRODUCT ONTO FLANGE

SECURE WITH SET SCREW

